



Ubee DDW3611 Wireless Cable Modem Gateway

Subscriber User Guide



Notices and Copyrights

Copyright © 2009, 2010 Ubee. All Rights Reserved. This document contains proprietary information of Ubee and is not to be disclosed or used except in accordance with applicable agreements. This material is protected by the copyright laws of the United States and other countries. It may not be reproduced, distributed, or altered in any fashion by any entity (either internal or external to Ubee), except in accordance with applicable agreements, contracts, or licensing, without the express written consent of Ubee and the business management owner of the material.

This device is Wifi Alliance Certified:



Contents

| | | |
|----------|--|-----------|
| 1 | Introduction..... | 1 |
| 1.1 | Device Overview | 1 |
| 1.1.1 | Physical Specifications, Standards, Firmware Operations..... | 2 |
| 1.1.2 | Default Values | 4 |
| 1.1.3 | LED Operational Summary | 5 |
| 2 | Graphical User Interface (GUI) Instructions..... | 7 |
| 2.1 | Access the User Interface | 7 |
| 2.1.1 | Complete Prerequisite Tasks/Connect the Device..... | 7 |
| 2.1.2 | Access the Web Interface | 7 |
| 2.2 | Information..... | 9 |
| 2.3 | Status..... | 10 |
| 2.4 | Downstream..... | 11 |
| 2.5 | Upstream | 12 |
| 2.6 | Event Log..... | 13 |
| 3 | Gateway..... | 15 |
| 3.1 | Information | 15 |
| 3.2 | Setup | 17 |
| 3.3 | DHCP..... | 18 |
| 3.4 | DHCP Static Lease | 20 |
| 3.5 | DDNS..... | 21 |
| 3.6 | Time | 22 |
| 3.7 | Advanced Gateway Setup - Options | 23 |
| 3.8 | Advanced Gateway Setup - Mac Filtering | 24 |
| 3.9 | Advanced Gateway Setup - IP Filtering | 25 |
| 3.10 | Advanced Gateway Setup - Port Filtering | 26 |
| 3.11 | Advanced Gateway Setup - Forwarding | 27 |
| 3.11.1 | Additional Information - Forwarding | 29 |
| 3.12 | Advanced Gateway Setup - Port Triggering..... | 29 |
| 3.12.1 | Additional Information - Port Triggering | 30 |
| 3.13 | Advanced Gateway Settings - Pass Through | 31 |
| 3.14 | Advanced Gateway Settings - DMZ Host..... | 32 |
| 4 | Wireless..... | 33 |
| 4.1 | Radio | 33 |
| 4.2 | Primary Network..... | 35 |
| 4.3 | Access Control..... | 39 |
| 4.4 | Advanced | 40 |
| 4.5 | Bridging | 43 |
| 4.6 | Wifi Multimedia | 44 |
| 4.6.1 | Additional Information - WiFi MultiMedia (WMM)..... | 45 |

| | | |
|----------|-------------------------|-----------|
| 5 | Parental Control | 47 |
| 5.1 | User Setup | 47 |
| 5.2 | Basic Settings | 49 |
| 5.3 | Tod Filter | 50 |
| 5.4 | Event Log | 51 |
| 6 | Tools | 52 |
| 6.1 | Ping | 52 |
| 6.2 | Trace Route | 53 |
| 6.3 | Client List | 54 |
| 6.4 | Password | 55 |
| 6.5 | Factory Default | 55 |

1 Introduction

Welcome to the Ubee family of data networking products. This guide is specific to the **DDW3611 Wireless Cable Modem Gateway**. This document serves the following purposes:

- ❑ To define all relevant device compliance standards and physical specifications.
- ❑ To provide user level instructions and explain device features.

1.1 Device Overview

This section contains the following subsections:

- ❑ Physical Specifications, Standards, Firmware Operations ([p. 2](#)).
- ❑ Default Values ([p. 4](#)).
- ❑ LED Operational Summary ([p. 5](#)).

Note: Some features described in this document may not be fully tested and supported in your specific firmware release version. Where possible, features supported only by specific versions are indicated in this document. See the Release Notes/Letter of Operational Considerations accompanying your firmware for further details.

1.1.1 Physical Specifications, Standards, Firmware Operations

The following list provides the features and specifications of the DDW3611 Wireless Cable Modem Gateway.

Interfaces

- ☐ Cable: F-Connector, Female
- ☐ LAN: 4 10/100/1000 Mbps RJ-45 Ports
- ☐ USB: 1 USB 2.0 Port

Standards/Certifications

- ☐ DOCSIS 3.0/Euro DOCSIS 3.0 Certified
- ☐ DOCSIS/Euro DOCSIS 1.0/1.1/2.0 Certified
- ☐ CE/ FCC Class B



Downstream*

- ☐ Maximum Data Rate per Channel (up to 8 channels):
- ☐ DOCSIS = 30 Mbps (64 QAM), 42 Mbps (256 QAM), EuroDOCSIS = 41 Mbps (64 QAM), 55 Mbps (256 QAM)
- ☐ Total Max Bandwidth (8 Channels): DOCSIS = 343 (304) Mbps, EuroDOCSIS 444 (400) Mbps
- ☐ Symbol Rate: 6952 Ksps
- ☐ RF Input Power: -15 to +15dBmV (64 QAM), -15 to +15dBmV (256 QAM)
- ☐ Input Impedance: 75 Ω

Upstream*

- ☐ Frequency Range: 5MHz ~ 65MHz
- ☐ Modulation A-TDMA: QPSK, 8, 16, 32, 64QAM, S-CMDA: QPSK, 8, 16, 32, 64, 128QAM
- ☐ Max B/W of 4 Channels = 122.88 (108) Mbps, B/W Per Channel (up to 4 channels) = [QPSK 0.32 ~ 10.24 Mbps, 8 QAM 0.48 ~ 15.36 Mbps, 16 QAM 0.64 ~ 20.48 Mbps, 32 QAM 0.80 ~ 25.60 Mbps, 64 QAM 0.96 ~ 30.72 Mbps, 128 QAM/TCM 30.72 Mbps]
- ☐ Symbol Rate: 160, 320, 640, 1280, 2560, 5120 Ksps
- ☐ RF Output Power: TDMA/ATDMA: +8dBmV to +54dBmV (32/64 QAM). ATDMA Only: +8dBmV to +55dBmV (8/16 QAM), +8dBmV to +58dBmV (QPSK). S-CDMA: +8dBmV to +53dBmV (all modulations)

*Actual speeds can vary based on factors including network configuration and speed.

Security

- ☐ VPN Pass-Through (IPSec/L2TP/PPTP)
- ☐ NAT Firewall, MAC/IP/Port Filtering, Parental Control
- ☐ Stateful Packet Inspection (SPI), DoS Attack Protection
- ☐ WPS/ WPA/ WPA2/ WPA-PSK& 64/128-bit WEP Encryption
- ☐ TACACS or RADIUS Authentication

Wireless and Network

- ☐ Supports 4 SSIDs, 802.11b/g/n compliant with speeds up to 300 Mbps
- ☐ DHCP Client/Server / Static IP network assignment
- ☐ RIPv1/ v2
- ☐ Ethernet 10/100/1000 BaseT / full-duplex auto-negotiate functionality, IPv4 to IPv6 support.

Device Management

- ☐ Customer premises equipment (CPE)
- ☐ Supports IEEE 802.11e Wi-Fi Multimedia (WMM) and UAPSD (power savings)
- ☐ Web-Based Configuration
- ☐ Telnet Remote Management
- ☐ Secure Firmware Upgrade via TFTP
- ☐ Configuration Backup and Restore
- ☐ SNMP Support
- ☐ Interoperability with main CMTS products

Physical and Environmental

- ☐ Dimensions: 172.2(W) x 254(D) x 42(H) mm
- ☐ Weight: 500 g
- ☐ Power: 12V/1.5A
- ☐ Operating Temperature: 0°C ~ 40°C
- ☐ Humidity: 5~90% (non-condensing)

1.1.2 Default Values

This device is pre-configured with the following parameters:

Local Port Address: 192.168.0.1, Web Interface: http://192.168.0.1

Operation Mode: NAT Mode (WAN setting)

Subnet Mask: 255.255.255.0

Wireless Defaults:

- ☐ Primary SSID (subscriber-managed) = DDW3611 plus last 2 characters of the cable modem's MAC Address (UPPER case, if letters). Example: **DDW3611BE**

Note: If the subscriber changes the SSID, the device does not revert to this default SSID upon any reset of the device, except in the case of a manual reset to restore factory default settings.

- ☐ WPA Pre-shared Key = DDW3611 plus the last 6 characters (3 octets) of the cable modem's MAC address. Example: **DDW36117CD4BE**
- ☐ WPS PIN = 12345670
- ☐ Device Name: UbeeAP

Web/Device Interface Logins:

Standard User/Consumer Web Interface Login:

Username: user

Password: user

1.1.3 LED Operational Summary

The following table describes what the device LEDs indicate.

| LED Position | | | LED1 | LED2 | LED3 | LED4 | LED5 | LED6 | LED7 | LED8 | LED9 | LED10 | LED11 |
|-------------------|---|---------------------------------|----------|---|--|---|---|-------|-------|--------|--|--|-------|
| LED Color | | | Green | Green/ Blue | Green/ Blue | Green/ Blue | Green/ Blue | Green | Green | Green | Green/ Blue | Green/ Blue | Green |
| LED Label: | | | USB Host | Eth-4 | Eth-3 | Eth-2 | Eth-1 | WPS | Wi-Fi | Online | US | DS | Power |
| | | | | | | | | | | | | | |
| CM Initialization | 1 | Power ON | On | On | On | On | On | Off | Off | On | On | On | On |
| | 2 | Load Image | Off | On, if connects | On, if connects | On, if connects | On, if connects | Off | Off | Off | Off | Off | Off |
| | 3 | H/W Check | Off | On, if connects | On, if connects | On, if connects | On, if connects | Off | On | Flash | Flash | Flash | On |
| | 4 | DS Locked and Sync OK | Off | On, if connects | On, if connects | On, if connects | On, if connects | Off | On | Flash | Flash | 1) On, Blue with channel bonding 2) On, Green without channel bonding | On |
| | 5 | US Ranging | Off | On, if connects | On, if connects | On, if connects | On, if connects | Off | On | Flash | Flash | 1) On, Blue with channel bonding 2) On, Green without channel bonding | On |
| | 6 | US Ranging OK | Off | On, if connects | On, if connects | On, if connects | On, if connects | Off | On | Flash | 1) On, Blue with channel bonding 2) On, Green without channel bonding | 1) On, Blue with channel bonding 2) On, Green without channel bonding | On |
| | 7 | Registration OK | Off | On, if connects | On, if connects | On, if connects | On, if connects | Off | On | On | 1) On, Blue with channel bonding 2) On, Green without channel bonding | 1) On, Blue with channel bonding 2) On, Green without channel bonding | On |
| | 8 | NACO Enable (network access) | Off | On, if connects | On, if connects | On, if connects | On, if connects | Off | On | On | 1) On, Blue with channel bonding 2) On, Green without channel bonding | 1) On, Blue with channel bonding 2) On, Green without channel bonding | On |
| | 9 | NACO Disable | Off | On, if connects | On, if connects | On, if connects | On, if connects | Off | On | Off | 1) On, Blue with channel bonding 2) On, Green without channel bonding | 1) On, Blue with channel bonding 2) On, Green without channel bonding | On |
| CM Operation | 1 | Attached CPE | On Green | On Green , if connect, Blue if speed linked at 1000 mbps (gigabit ethernet) | On, if connect, Blue (same as explained to left). | On, if connects, Blue (same as explained to left). | On, if connects, Blue (same as explained to left). | On | On | On | 1) On, Blue with channel bonding 2) On, Green without channel bonding | 1) On, Blue with channel bonding 2) On, Green without channel bonding | On |
| | 2 | CPE Data Tx/Rx | Flash | Flash, if connects | | Flash, if connects | Flash, if connects | Flash | Flash | On | 1) On, Blue with channel bonding 2) On, Green without channel bonding | 1) On, Blue with channel bonding 2) On, Green without channel bonding | On |

2 Graphical User Interface (GUI) Instructions

This chapter explains how to access and use the user interface for the DDW3611 Wireless Cable Modem Gateway.

2.1 Access the User Interface

Use the instructions in this section to access the user interface for the DDW3611 Wireless Cable Modem Gateway. The web interface provides the mechanism to make operational configuration changes to the device.

2.1.1 Complete Prerequisite Tasks/Connect the Device

Complete the following prerequisite tasks before installing the DDW3611 Wireless Cable Modem Gateway and accessing the web interface.

- ☐ Remove all contents from the wireless router packaging.
- ☐ In addition to the network cable shipped with the device, you will need another network cable to use when installing/configuring the device.
- ☐ Have a Windows PC available and powered on. The Windows PC must have an ethernet network adapter/ethernet port. The PC must also have an internet browser installed (Netscape or Internet Explorer).
- ☐ Connect the power adapter that is included with the product package to the DDW3611 Wireless Cable Modem Gateway and to the power outlet.
- ☐ Connect one end of a network cable to your computer's Ethernet port. Connect the other end to one of the LAN ports on the DDW3611 Wireless Cable Modem Gateway.


2.1.2 Access the Web Interface

Use the following procedure to access the web interface using Internet Explorer from a Windows computer.

1. From the computer, launch an internet browser (Internet Explorer or Netscape).
2. In the internet browser, enter the following address and press **<Enter/Return>**:


<http://192.168.0.1>

3. The Cable Modem Information Screen displays key information about the device.

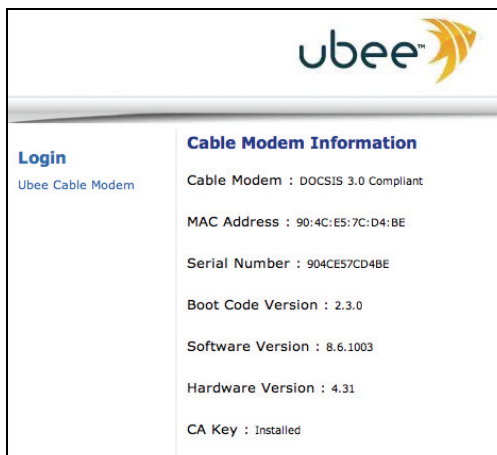

4. Click **Ubee Cable Modem** under **Login** to the left side of the screen to access the web interface.
5. At the login window, enter the user credentials:
- ☐ **Standard User/Consumer Web Interface Login:**
 - ☐ Username: user
 - ☐ Password: user
6. Click **OK** and the web interface is displayed.


Note: The username and password must be entered in lower case letters.

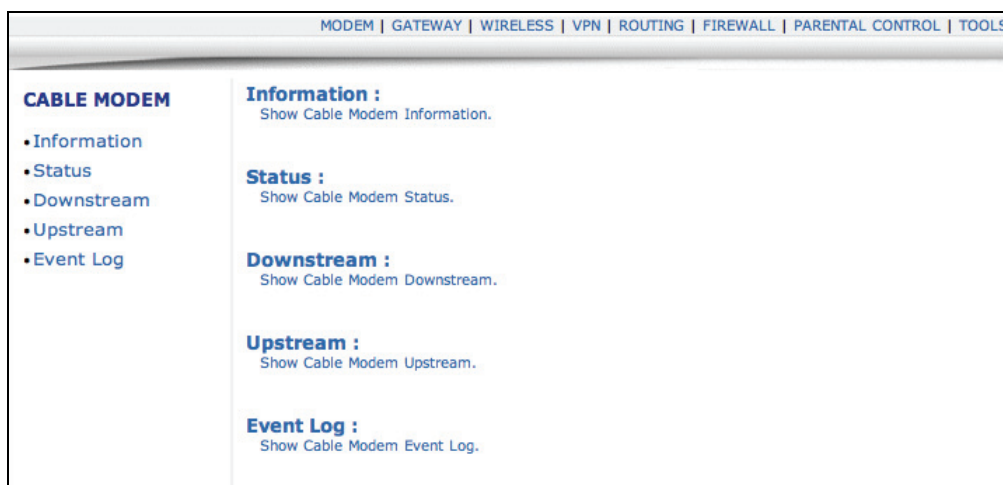

2.2 Information

This section explains how to use the **Information** screen of the web interface. The **Information** screen displays the device's core software configuration.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Information** link from the left side of the screen. Field explanations are listed below the following screen example.

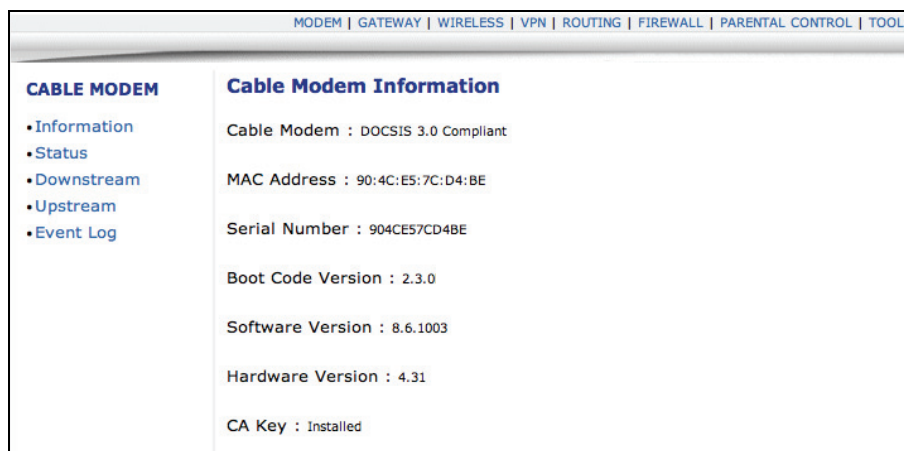

| Label | Description |
|--------------------------|---|
| Cable Modem | The current DOCSIS standard of the device. |
| MAC Address | The unique Media Access Control (MAC) hardware address of cable modem. |
| Serial Number | The unique manufacturer serial number of the device. |
| Boot Code Version | The boot software code version of the device. |
| Software Version | The general software version of the device. |
| Hardware Version | The internal version number that identifies the hardware design. |
| CA Key | The device installs a Certificate Authority (CA) key that is transferred from the service provider's server after the cable modem is authenticated. The key is used to secure communication between the service provider and the cable modem. |

2.3 Status

This section explains how to use the **Status** screen of the web interface. The **Status** screen displays the device's general connection information.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Status** link from the left side of the screen. Field explanations are listed below the following screen example.

MODEM | GATEWAY | WIRELESS | VPN | ROUTING | FIREWALL | PARENTAL CONTROL | TOOLS

CABLE MODEM

Information

Status

Downstream

Upstream

Event Log

Cable Modem Status

| Item | Status | Comments |
|-----------------------------|----------------|---------------------------|
| Acquired Downstream Channel | 621.000000 MHz | Primary Downstream Locked |
| Ranged Upstream Channel | 32.000000 MHz | Success |
| CM Provisioning State | OK | Operational |

Refresh

| Label | Description |
|------------------------------------|---|
| Acquired Downstream Channel | Displays a Downstream channel that the cable modem is trying to lock to and the progress. |
| Ranged Upstream Channel | Displays an upstream channel that the device is trying to range with and the progress. |
| CM Provisioning State | After the physical initialization, the cable modem will be configured by a DHCP server from the service provider. Once the cable modem obtains an IP address, the cable modem is online. The Status column shows the connection progress. The Comments column displays the messages indicating connection error information, if errors occur. |
| Refresh | Click to refresh the status information. |

2.4 Downstream

This section explains how to use the **Downstream** screen of the web interface. The **Downstream** screen displays detailed information on the device's connection to downstream channels from the service provider.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Downstream** link from the left side of the screen. Field explanations are listed below the following screen example.

| MODEM GATEWAY WIRELESS VPN ROUTING FIREWALL PARENTAL CONTROL TOOLS | | | | |
|--|-------------|-------------|-------------|-------------|
| CABLE MODEM | | | | |
| Cable Modem Downstream | | | | |
| • Information | | | | |
| • Status | | | | |
| • Downstream | | | | |
| • Upstream | | | | |
| • Event Log | | | | |
| | DS-1 | DS-2 | DS-3 | DS-4 |
| Frequency | 621000000 | 603000000 | 609000000 | 615000000 |
| Lock Status | Locked | Locked | Locked | Locked |
| Channel Id | 1 | 2 | 3 | 4 |
| Modulation | 256QAM | 256QAM | 256QAM | 256QAM |
| Symbol Rate (Msym/sec) | 5.360537 | 5.360537 | 5.360537 | 5.360537 |
| Interleave Depth | I=32 J=4 | I=32 J=4 | I=32 J=4 | I=32 J=4 |
| Power Level (dBmV) | -6.1 | -5.9 | -5.8 | -5.8 |
| RxMER (dB) | 39.70 | 39.60 | 39.80 | 39.30 |
| Correctable Codewords | 0 | 0 | 0 | 0 |
| Uncorrectable Codewords | 0 | 0 | 0 | 0 |
| Refresh | | | | |

| Label | Description |
|-------------------------|--|
| Frequency | Displays the downstream channel frequency on which the cable modem is scanning. |
| Lock Status | Displays if the cable modem succeeded in locking to a downstream channel. |
| Channel ID | Displays the downstream channel ID. |
| Modulation | Displays the modulation method that's required for the downstream channel to lock on to by the cable modem. This method is determined by the service provider. |
| Symbol Rate | Displays the symbol rate. The current cable modem downstream symbol rates are: QAM64 is 5056941 sym/sec, QAM256 is 5360537 sym/sec. |
| Interleave Depth | Displays the current cable modem downstream Interleave depth (4/8/16/32/64/128/other). |
| Power Level | Displays the receiver power level after ranging process. |

| Label | Description |
|--------------------------------|--|
| RxMER | The Receiver Modulation Error Ratio is used to quantify the performance of a digital radio receiver in a communications system using digital modulation. |
| Correctable Codewords | Displays the quantity of codewords which are correctable. |
| Uncorrectable Codewords | Displays the quantity of codewords which are not correctable. |

2.5 Upstream

This section explains how to use the **Upstream** screen of the web interface. The **Upstream** screen displays detailed information on the device's connection to upstream channels to the service provider.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Upstream** link from the left side of the screen. Field explanations are listed below the following screen example.

| MODEM GATEWAY WIRELESS VPN ROUTING FIREWALL PARENTAL CONTROL TOOLS | | | | | |
|--|-------------------------------|--|-------------|-------------|-------------|
| CABLE MODEM | | Cable Modem Upstream | | | |
| <ul style="list-style-type: none"> • Information • Status • Downstream • Upstream • Event Log | | | | | |
| | | US-1 | US-2 | US-3 | US-4 |
| | Channel Type | 1.1/2.0 | N/A | N/A | N/A |
| | Channel Id | 6 | N/A | N/A | N/A |
| | Frequency (HZ) | 32000000 | N/A | N/A | N/A |
| | Ranging Status | Success | N/A | N/A | N/A |
| | Modulation | 64QAM | N/A | N/A | N/A |
| | Symbol Rate (Ksym/sec) | 5120 | N/A | N/A | N/A |
| | Mini-Slot Size | 4 | N/A | N/A | N/A |
| | Power Level (dBmV) | 36.5 | N/A | N/A | N/A |
| | T1 Timeouts | 0 | N/A | N/A | N/A |
| | T2 Timeouts | 0 | N/A | N/A | N/A |
| | T3 Timeouts | 1 | N/A | N/A | N/A |
| | T4 Timeouts | 0 | N/A | N/A | N/A |
| | | <input type="button" value="Refresh"/> | | | |

| Label | Description |
|-----------------------|---|
| US-1 to US-4 | Upstream Channels. |
| Channel Type | Displays the channel type. |
| Channel ID | Displays the current cable modem upstream channel ID. |
| Frequency | Displays the current cable modem upstream frequency (Hz). |
| Ranging Status | Displays the upstream ranging status. |

| Label | Description |
|---------------------------------|---|
| Modulation | Displays the current cable modem upstream modulation type (QPSK/ QAM8 /QAM16/ QAM32/ QAM64/ QAM128/ QAM256). |
| Symbol Rate | Displays the symbol rate (Ksym/sec). |
| Upstream Mini-Slot Size | Displays the current cable modem upstream mini-slot size in Timebase Ticks of 6.25. |
| Power Level | Displays the current cable modem upstream transmit power (dBmV). |
| T-1 through T-4 Timeouts | T-1-Displays DHCP time expiration, T-2-Displays DHCP time expiration, T-3-Displays RNG-RSP time expiration, T-4-Displays RNG time expiration. |

2.6 Event Log

This section explains how to use the **Event Log** screen of the web interface. The **Event Log** screen displays log information that may be useful to diagnose operational issues with the device.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Event Log** link from the left side of the screen. Field explanations are listed below the following screen example.

| MODEM GATEWAY WIRELESS VPN ROUTING FIREWALL PARENTAL CONTROL TOOLS | | | | | | | | | | | | | | | | | | | |
|--|----------------------|--|---|------------|-----------|----------|-------------|----------------------|----------------------|--------------|---|----------------------|----------------------|--------------|--|----------------------|----------------------|--------------|--|
| CABLE MODEM <ul style="list-style-type: none"> • Information • Status • Downstream • Upstream • Event Log | | Cable Modem Event Log <table> <tr> <th>First Time</th><th>Last Time</th><th>Priority</th><th>Description</th></tr> <tr> <td>Time Not Established</td><td>Time Not Established</td><td>Critical (3)</td><td>No Ranging Response received - T3 time-out; CM-MAC=90:4c:e5:7c...</td></tr> <tr> <td>Time Not Established</td><td>Time Not Established</td><td>Critical (3)</td><td>SYNC Timing Synchronization failure - Failed to acquire QAM/Q...</td></tr> <tr> <td>Time Not Established</td><td>Time Not Established</td><td>Critical (3)</td><td>SYNC Timing Synchronization failure - Failed to acquire FEC f...</td></tr> </table> | | First Time | Last Time | Priority | Description | Time Not Established | Time Not Established | Critical (3) | No Ranging Response received - T3 time-out; CM-MAC=90:4c:e5:7c... | Time Not Established | Time Not Established | Critical (3) | SYNC Timing Synchronization failure - Failed to acquire QAM/Q... | Time Not Established | Time Not Established | Critical (3) | SYNC Timing Synchronization failure - Failed to acquire FEC f... |
| First Time | Last Time | Priority | Description | | | | | | | | | | | | | | | | |
| Time Not Established | Time Not Established | Critical (3) | No Ranging Response received - T3 time-out; CM-MAC=90:4c:e5:7c... | | | | | | | | | | | | | | | | |
| Time Not Established | Time Not Established | Critical (3) | SYNC Timing Synchronization failure - Failed to acquire QAM/Q... | | | | | | | | | | | | | | | | |
| Time Not Established | Time Not Established | Critical (3) | SYNC Timing Synchronization failure - Failed to acquire FEC f... | | | | | | | | | | | | | | | | |
| | | <input type="button" value="Refresh"/> <input type="button" value="Clear Log"/> | | | | | | | | | | | | | | | | | |

| Label | Description |
|-------------|---|
| First Time | Displays the time of the event. |
| Last Time | Displays the last time of the event. |
| Priority | Displays the event log severity. |
| Description | Displays a detailed description of the event log. |
| Refresh | Refreshes the event log record. |

3 Gateway

This chapter explains how to use the **Gateway** functions of the web interface. The Gateway functions provide the majority of configuration for the device including WAN IP addresses, LAN IP addresses, DHCP, and DDNS. Also, advanced setting like DMZ, MAC filtering, and port forwarding are provided.

3.1 Information

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Gateway** link from the top of the screen. Then select **Information**.
3. The **Information** fields are defined following this screen example.

| MODEM GATEWAY WIRELESS VPN ROUTING FIREWALL PARENTAL CONTROL TOOLS | |
|---|---|
| Basic Gateway Setup <ul style="list-style-type: none"> • Information • Setup • DHCP • Static Lease • DDNS • Time Advanced Gateway Setup <ul style="list-style-type: none"> • Options • MAC Filtering • IP Filtering • Port Filtering • Forwarding • Port Triggering • Pass Through • DMZ Host | <h3>Gateway - Information</h3> <div> INTERNET SETTINGS <p> Gateway MAC Address: 90:4c:e5:7c:d4:c1 Internet IP Address: 98.245.252.42 Subnet Mask: 255.255.240.0 Default Gateway: 98.245.240.1 DNS: 68.87.66.135 68.87.64.140 DHCP Remaining Time: 0 days 00:42:35 </p> <input type="button" value="Refresh"/> </div> <hr/> <div> LOCAL SETTINGS <p> Gateway IP Address: 192.168.0.1 Subnet Mask: 255.255.255.0 DHCP Server: Enabled NAT : Enabled Wireless Status : Enabled Operating Mode: NAT mode Private IP Range: 192.168.0.3 through 192.168.0.254 Public IP Range: 0.0.0.0 through 0.0.0.0 System Up-Time: 4 Hours 14 Minutes 34 Seconds </p> </div> |

| Label | Description |
|----------------------------|---|
| Internet Settings | |
| Gateway MAC Address | Displays the Media Access Control (MAC) address of the residential gateway. |
| Internet IP Address | Displays the Internet IP address obtained from the service provider. |
| Subnet Mask | Displays the subnet mask of the Internet IP address. |
| Default Gateway | Displays the default gateway IP address. |
| DNS | Displays the DNS server IP address. |
| DHCP Remaining Time | Displays the remaining DHCP lease time before expiration |
| Refresh | Click to refresh the information. |

| Label | Description |
|------------------------------------|--|
| Local Settings | |
| Gateway IP Address | Displays the local IP address of the LAN interface. |
| Subnet Mask | Displays the subnet mask value. |
| DHCP Server | Displays the status of the DHCP sever feature (Enabled/Disabled). |
| NAT | Displays the status of the NAT feature (Enabled/Disabled). |
| Wireless Status | Displays the status of the wireless feature (Enabled/Disabled). |
| Operating Mode | Displays what mode the router is working in (Bridge, NAT, Router, or NAT Router). Note: Firewall menu options are not available when the device is in Bridge mode. Firewall options are available only when the device is in NAT, NATRoute, or Route modes. |
| Private IP Range | Displays the private IP address assigned to DHCP client. |
| Public IP DHCP Server Range | Displays the Public IP DHCP Server Range. |
| Public IP Total Range | Displays the Public IP DHCP Server Range. |
| System Up-Time | Displays the accumulated time since the last power cycle. |

3.2 Setup

The **Setup** option allows you to make basic configurations to the device.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Gateway** link from the top of the screen.
3. Click **Setup** from the left side of the screen. The **Setup** fields are explained following this screen example.

| Label | Description |
|--------------------------|---|
| LAN IP Address | Defines the local IP address, which will be the default gateway address for all wired LAN hosts that connect to the DDW3611 Wireless Cable Modem Gateway. |
| LAN MAC Address | Displays the LAN interface's hardware address. |
| WAN IP Address | Displays the current WAN public IP address that is obtained from the service provider. |
| WAN MAC Address | Displays the WAN interface's hardware address. |
| Duration | Displays the accumulated time since successfully acquiring a WAN public IP address. |
| Expires | Displays the remaining time before the expiration of the WAN IP address, if applicable. |
| Release WAN Lease | Click to release the WAN public IP address. |
| Renew WAN Lease | Click to renew the WAN IP address. |
| Refresh | Click to refresh the status of this page. |

| Label | Description |
|----------------------------|--|
| WAN Connection Type | Select the WAN connection type. For each type, different data entry is required, as explained below: 1. DHCP: The WAN interface is set to be a DHCP client, and the IP address is assigned by the service provider's DHCP server. 2. Static IP: For Static IP, you must manually enter the IP address for the WAN interface. 3. PPTP (DHCP): For Point to Point Tunneling Protocol (PPTP), you must enter a username, password, and the PPTP server's IP address. |
| Host Name | Enter the host name for the router. This may be required by some service providers. |
| Domain Name | Enter the domain for the router. This may be required by some service providers. |
| MTU Size | Enter the Maximum Transmission Unit size, which defines the largest size of the packet or frame that the device can transfer (256-1500). If this is not given by the Service Provider, leave it as is using 0 for the default. |
| Apply | Click to save all changes made in the screen. |

3.3 DHCP

The **DHCP** option allows you to configure DHCP-specific behavior on the device.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Gateway** link from the top of the screen.
3. Click **DHCP** from the left side of the screen. The **DHCP** fields are explained following this screen example.

The screenshot shows the 'Gateway - DHCP' configuration page. On the left is a sidebar with a tree view containing 'Basic Gateway Setup' (with sub-items: Information, Setup, DHCP, Static Lease, DDNS, Time) and 'Advanced Gateway Setup' (with sub-items: Options, MAC Filtering, IP Filtering, Port Filtering, Forwarding, Port Triggering, Pass Through, DMZ Host). The main content area is titled 'Gateway - DHCP' and includes the following fields:

- DHCP Server:** Radio buttons for 'Yes' (selected) and 'No'.
- Starting Address Set:**
 - Private Starting Address:** 192.168.0.10 (range 1~253). **Number of CPEs:** 245.
 - Public Starting Address:** 0.0.0.0 (range 1~254). **Number of CPEs:** 0.
- Lease Time:** 3600.
- Apply:** A button to save changes.
- DHCP Clients:** A table with columns: MAC Address, IP Address, Subnet Mask, Duration, Expires, and Select.

| MAC Address | IP Address | Subnet Mask | Duration | Expires | Select |
|--------------|---------------|-----------------|---------------------|--------------|-----------------------|
| 002170dd886b | 192.168.0.011 | 255.255.255.000 | D:00 H:01 M:00 S:00 | --- --:--:-- | <input type="radio"/> |
- Current System Time:** --- --:--:--
- Force Available:** A button.

| Label | Description |
|---------------------------------|--|
| DHCP Server | Select Yes to enable or No to disable DHCP on the device. If No is selected, all of the static DHCP rules in this screen are ignored. |
| Private Starting Address | Define the starting private IP address for the pool of IP addresses that may be used by connecting clients. Private addresses are translated to public IPs in order to be used on the network. |
| Public Starting Address | Define the starting public IP address. Public addresses can be recognized on the network. |
| Number of CPEs | Define the maximum number of Customer Premises equipment (CPE) that can connect to the network, via the DDW3611 Wireless Cable Modem Gateway. |
| Lease Time | Enter the time in minutes between 1 and 71582788. This field defines the DHCP lease time duration. A DHCP user's PC gets an IP address with a lease time. When the lease time expires, the PC must connect to the DHCP server and be reissued another, unused IP address. |
| DHCP Clients | <p>This list shows all DHCP clients currently connected to the wireless router, either via Ethernet link, or via wireless connection. Each client is also listed with the following information:</p> <ul style="list-style-type: none"> ♦ MAC Address / IP Address / Subnet Mask ♦ Duration / Expires: Duration displays the accumulated time since the client acquired the IP address. Expires is the time until the IP expires and must be recycled. If the IP address is reserved to a certain host, it will show "STATIC IP ADDRESS." ♦ Select: Click the Select radio button to reserve the current private IP address to be assigned to this host statically. |
| Apply | Click Apply to save all changes. |
| Force Available | Click Force Available to activate a selected rule in the DHCP Clients List and assign IP addresses. Note: The Select checkbox must be clicked. |

3.4 DHCP Static Lease

The **Static Lease** option allows you to assign static IP addresses to clients on your network within a range.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Gateway** link from the top of the screen.
3. Click **Static Lease** from the left side of the screen. The **Static Lease** fields are explained following this screen example.

MODEM | GATEWAY | WIRELESS | VPN | ROUTING | FIREWALL | PARENTAL CONTROL | TOOLS

Basic Gateway Setup

- Information
- Setup
- DHCP
- Static Lease
- DDNS
- Time

Advanced Gateway Setup

- Options
- MAC Filtering
- IP Filtering
- Port Filtering
- Forwarding
- Port Triggering
- Pass Through
- DMZ Host

Gateway - DHCP Static Lease

Note: If some IP addresses turn to red color, you should check the DHCP pools!
Current DHCP Server IP Ranges' information
Private IP Range: 192.168.0.10 -- 192.168.0.254
Public IP Range: 0.0.0.0 -- 0.0.0.0

| Index | MAC Address | IP Address | Enabled | Clear |
|-------|-----------------------------|------------|--------------------------|--------------------------|
| 1. | 00 : 00 : 00 : 00 : 00 : 00 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> |
| 2. | 00 : 00 : 00 : 00 : 00 : 00 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> |
| 3. | 00 : 00 : 00 : 00 : 00 : 00 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> |
| 4. | 00 : 00 : 00 : 00 : 00 : 00 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> |
| 5. | 00 : 00 : 00 : 00 : 00 : 00 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> |
| 6. | 00 : 00 : 00 : 00 : 00 : 00 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> |
| 7. | 00 : 00 : 00 : 00 : 00 : 00 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> |
| 8. | 00 : 00 : 00 : 00 : 00 : 00 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> |

Apply

| Label | Description |
|--------------------|--|
| Index | Index number of the each client that connects to your network. |
| MAC Address | This field is populated with the MAC address of the client that you may want to assign a static IP address to. |
| IP Address | Enter a specific IP address to assign to the specific client/host. |
| Enabled | Click Enabled to activate this rule. |
| Clear | Click Clear to delete the rule. |
| Apply | Click Apply to save all screen changes. |

3.5 DDNS

The Dynamic Domain Name Service (DDNS) option allows you to configure your registered Domain Name with a dynamic IP address.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Gateway** link from the top of the screen.
3. Click **DDNS** from the left side of the screen. The **DDNS** fields are explained following this screen example.

| Label | Description |
|--------------------------|--|
| DDNS Service | Select the service provider used for your DDNS Service or Disabled. www. DyDNS.org www.no-ip.com |
| User Name | Input your DDNS account username as subscribed to the service provider. |
| Password | Enter your password for the above account. |
| Host Name | Input the host name, as specified by the DDNS service provider. |
| IP address/Status | These fields are automatically populated once the User Name and Password are entered. |
| Apply | Click Apply to save all screen changes. |
| Refresh | Click to refresh the page. |

3.6 Time

The **Time** option allows you to configure the system time obtained from network servers via Simple Network Time Protocol (SNTP). The device must be reset for any changes to take effect.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Gateway** link from the top of the screen.
3. Click **Time** from the left side of the screen. The **Time** fields are explained following this screen example.

| Label | Description |
|--------------------------|--|
| Enable SNTP | Click Yes to enable SNTP (Network Time Protocol). Click No to disable the feature. SNTP is a protocol for synchronizing the clocks of computing devices over networks. |
| Current Time | Displays the current system time. |
| System Start Time | Displays the accumulated time since system was started. |
| Time Server 1 | Defines the Time server IP address or Domain name. Use the one provided, or enter an alternative choice. |
| Time Server 2 | Defines the Time server IP address or Domain name. Use the one provided, or enter an alternative choice. |
| Time Server 3 | Defines the Time server IP address or Domain name. Use the one provided, or enter an alternative choice. |
| Time Zone Offset | If needed, define the time zone offset in Hours and Minutes. For example: 8 means GMT + 08, -1 means GMT -01. |
| Apply | Click Apply to save all screen changes |
| Reset Values | Click Reset Values to reset the screen to factory defaults. |

3.7 Advanced Gateway Setup - Options

The **Options** selection allows you to define what networking protocols are enabled or disabled on the device.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Gateway** link from the top of the screen.
3. Click **Options** from the left side of the screen. The **Options** fields are explained following this screen example.

MODEM | GATEWAY | WIRELESS | VPN | ROUTING | FIREWALL | PARENTAL CONTROL | TOOLS

Basic Gateway Setup

- Information
- Setup
- DHCP
- Static Lease
- DDNS
- Time

Advanced Gateway Setup

- Options
- MAC Filtering
- IP Filtering
- Port Filtering
- Forwarding
- Port Triggering
- Pass Through
- DMZ Host

Advanced Gateway - Options

WAN Blocking ☐ Enable

Ipsec PassThrough ☐ Enable

PPTP PassThrough ☐ Enable

Multicast Enable ☐ Enable

UPnP Enable ☐ Enable

DNS Relay ☐ Enable

Apply

| Label | Description |
|--------------------------|---|
| WAN Blocking | Select Enable to block connection requests initialized from Internet users. |
| Ipsec PassThrough | If Internet users initialize an IPsec VPN request to a host located behind the router, NAT makes this attempt fail. Select Enable to force the router to redirect the IPsec request to the local host. |
| PPTP PassThrough | If Internet users initialize a PPTP VPN request to a host located behind the router, NAT will make this attempt fail. Select Enable to force the router to redirect the PPTP request to the local host. |
| Multicast Enable | Multicast optimizes the bandwidth utilization compared with unicast especially video streaming applications. Select Enable to enable multicast. |

| | |
|--------------------|--|
| UPnP Enable | Select Enable to activate Universal Plug and Play (UPnP). A UPnP device can dynamically join a network, obtain an IP address, convey its capabilities, and learn about other devices on the network. In turn, a device can leave a network smoothly and automatically when it is no longer in use. |
| DNS Relay | |
| Apply | Click Apply to save all screen changes. |

3.8 Advanced Gateway Setup - Mac Filtering

The **MAC Filtering** option allows you to filter MAC addresses in order to block internet traffic from specific network devices on the LAN. This filtering establishes a black list. Any host listed on this list will not be able to access the network/internet through the DDW3611 Wireless Cable Modem Gateway.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Gateway** link from the top of the screen.
3. Click **MAC Filtering** from the left side of the screen. The **MAC Filtering** fields are explained following this screen example.

MODEM | GATEWAY | WIRELESS | VPN | ROUTING | FIREWALL | PARENTAL CONTROL | TOOLS

Basic Gateway Setup

- Information
- Setup
- DHCP
- Static Lease
- DDNS
- Time

Advanced Gateway Setup

- Options
- **MAC Filtering**
- IP Filtering
- Port Filtering
- Forwarding
- Port Triggering
- Pass Through
- DMZ Host

Advanced Gateway - MAC Filtering

| Index | MAC Address | Clear |
|-------|-----------------------------|--------------------------|
| 1. | 00 : 00 : 00 : 00 : 00 : 00 | <input type="checkbox"/> |
| 2. | 00 : 00 : 00 : 00 : 00 : 00 | <input type="checkbox"/> |
| 3. | 00 : 00 : 00 : 00 : 00 : 00 | <input type="checkbox"/> |
| 4. | 00 : 00 : 00 : 00 : 00 : 00 | <input type="checkbox"/> |
| 5. | 00 : 00 : 00 : 00 : 00 : 00 | <input type="checkbox"/> |
| 6. | 00 : 00 : 00 : 00 : 00 : 00 | <input type="checkbox"/> |
| 7. | 00 : 00 : 00 : 00 : 00 : 00 | <input type="checkbox"/> |
| 8. | 00 : 00 : 00 : 00 : 00 : 00 | <input type="checkbox"/> |
| 9. | 00 : 00 : 00 : 00 : 00 : 00 | <input type="checkbox"/> |
| 10. | 00 : 00 : 00 : 00 : 00 : 00 | <input type="checkbox"/> |

View Additional Rules: ✓ 1 to 10 11 to 20

| Label | Description |
|--------------------|---------------------------------|
| Index | The Index number of the rule. |
| MAC Address | Enter the MAC address to block. |

| | |
|-------------------------------|---|
| Clear | Select Clear to delete the filtering rule. |
| View Additional Rules: | Select from the pull-down to display the remaining 10 rules, if they exist. 20 rules total are supported. |
| Apply | Click Apply to save all screen changes. |

3.9 Advanced Gateway Setup - IP Filtering

The **IP Filtering** option allows you to filter IP addresses in order to block internet traffic to specific network devices on the LAN. Any host listed on this list will not be accessible to internet traffic.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Gateway** link from the top of the screen.
3. Click **IP Filtering** from the left side of the screen. The **IP Filtering** fields are explained following this screen example.

| IP Filtering | | |
|---------------|-------------|--------------------------|
| Start Address | End Address | Enabled |
| 192.168.0.0 | 192.168.0.0 | <input type="checkbox"/> |
| 192.168.0.0 | 192.168.0.0 | <input type="checkbox"/> |
| 192.168.0.0 | 192.168.0.0 | <input type="checkbox"/> |
| 192.168.0.0 | 192.168.0.0 | <input type="checkbox"/> |
| 192.168.0.0 | 192.168.0.0 | <input type="checkbox"/> |
| 192.168.0.0 | 192.168.0.0 | <input type="checkbox"/> |
| 192.168.0.0 | 192.168.0.0 | <input type="checkbox"/> |
| 192.168.0.0 | 192.168.0.0 | <input type="checkbox"/> |
| 192.168.0.0 | 192.168.0.0 | <input type="checkbox"/> |
| 192.168.0.0 | 192.168.0.0 | <input type="checkbox"/> |

Apply

| Label | Description |
|----------------------|---|
| Start Address | Enter the start IP address. |
| End Address | Enter the end IP address. |
| Enabled | Select Enabled to activate the rule. |
| Apply | Click Apply to save all screen changes. |

3.10 Advanced Gateway Setup - Port Filtering

The **Port Filtering** option allows you to configure port filters in order to block specific internet services on specific ports to all devices on the LAN.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Gateway** link from the top of the screen.
3. Click **Port Filtering** from the left side of the screen. The **Port Filtering** fields are explained following this screen example.

| Start Port | End Port | Protocol | Enabled |
|------------|----------|----------|--------------------------|
| 1 | 65535 | Both | <input type="checkbox"/> |
| 1 | 65535 | Both | <input type="checkbox"/> |
| 1 | 65535 | Both | <input type="checkbox"/> |
| 1 | 65535 | Both | <input type="checkbox"/> |
| 1 | 65535 | Both | <input type="checkbox"/> |
| 1 | 65535 | Both | <input type="checkbox"/> |
| 1 | 65535 | Both | <input type="checkbox"/> |
| 1 | 65535 | Both | <input type="checkbox"/> |
| 1 | 65535 | Both | <input type="checkbox"/> |
| 1 | 65535 | Both | <input type="checkbox"/> |

Apply

| Label | Description |
|-------------------|--|
| Start Port | Enter the start port. |
| End Port | Enter the end port. |
| Protocol | Select the protocol type, or select Both for UDP and TCP. |
| Enabled | Select Enabled to active the rule and filter out all traffic on the specified ports. |
| Apply | Click Apply to save all screen changes. |

3.11 Advanced Gateway Setup - Forwarding

The **Forwarding** option allows you to configure incoming requests on specific port numbers to reach your internal servers such as web servers, FTP servers, mail servers, gaming consoles, and others, so they can be accessible from the public internet. Refer to [page 29](#) for more detailed information on Forwarding. Review the following information:

When setting up forwarding, you are recommended to assign a static IP lease to the client/host for which you are setting up forwarding. This way, the IP does not change and disrupt your forwarding rules. For example, if you are hosting a telnet server in your internal network and you wish to setup a forwarding rule for it, you should assign a static IP lease to that system to keep the IP from renewing and disrupting the forwarding rule. Refer to the following:

- ☐ “Client List” on [page 54](#)—Use this option to obtain the MAC and IP address of the internal host for which you are setting up a forwarding rule. You will need these for the following step.
- ☐ “DHCP Static Lease” on [page 20](#)—Use this option to setup the static lease for the internal network host.
- ☐ If your host system(s) do not have communications issues with the internet, then you do not need to use Forwarding.

The following screen example shows how to setup an XBOX running Modern Warfare 2. Since multiple ports are used for XBOX, separate forwarding rules are setup for each port. The XBOX IP is entered in the Local IP field. The ports used by the XBOX are defined in the Internal Port field. The ports used by XBOX are also defined in the External Port Start and End fields. This setup, simply stated, allows the XBOX to receive data from the internet.

- ☐ For detailed information on port forwarding, including how to set it up for specific applications using specific network devices (for example, cable modems), refer to: <http://portforward.com>
- ☐ For additional information, consult your host device's or specific application's user manual.

1. Access the web interface. Refer to [page 16](#), if needed.
2. Click the **Gateway** link from the top of the screen.
3. Click **Forwarding** from the left side of the screen. The **Forwarding** fields are

explained following this screen example.

Basic Gateway Setup

- Information
- Setup
- DHCP
- Static Lease
- DDNS
- Time

Advanced Gateway Setup

- Options
- MAC Filtering
- IP Filtering
- Port Filtering
- Forwarding
- Port Triggering
- Pass Through
- DMZ Host
- IP Mapping

Advanced Gateway - Forwarding

Port Forwarding

| Index | Local IP | Internal Port | Public Interface IP | Ext Start Port | Ext End Port | Protocol | Enabled |
|-------|--------------|---------------|---------------------|----------------|--------------|--------------------|-------------------------------------|
| 1. | 192.168.0.10 | 53 | 0.0.0.0 | 53 | 53 | Both | <input checked="" type="checkbox"/> |
| 2. | 192.168.0.10 | 80 | 0.0.0.0 | 80 | 80 | Both | <input checked="" type="checkbox"/> |
| 3. | 192.168.0.10 | 88 | 0.0.0.0 | 88 | 88 | Both | <input checked="" type="checkbox"/> |
| 4. | 192.168.0.10 | 3074 | 0.0.0.0 | 3074 | 3074 | Both | <input checked="" type="checkbox"/> |
| 5. | 192.168.0.0 | 0 | 0.0.0.0 | 0 | 0 | TCP UDP Both | <input type="checkbox"/> |
| 6. | 192.168.0.0 | 0 | 0.0.0.0 | 0 | 0 | Both | <input type="checkbox"/> |
| 7. | 192.168.0.0 | 0 | 0.0.0.0 | 0 | 0 | Both | <input type="checkbox"/> |
| 8. | 192.168.0.0 | 0 | 0.0.0.0 | 0 | 0 | Both | <input type="checkbox"/> |
| 9. | 192.168.0.0 | 0 | 0.0.0.0 | 0 | 0 | Both | <input type="checkbox"/> |
| 10. | 192.168.0.0 | 0 | 0.0.0.0 | 0 | 0 | Both | <input type="checkbox"/> |

View Additional Rules: 1 to 10

| Label | Description |
|----------------------------|--|
| Index | Displays the Index number of the rule. |
| Local IP | Enter the last digits of the IP address of the server for which to setup the forwarding rule. |
| Internal Port | Enter the port number listened to by the server host located in your LAN. |
| Public Interface IP | Normally, this field is not modified unless you wish to designate another router on the network to forward data through. |
| Ext. Start Port | Define the port number to start the range of ports to publish to the Internet. |
| Ext. End Port | Define the port number to end the range of ports published to Internet. Note: Be very careful with ranges. Ports within a range will not be usable by other applications that may require them. It is common and safer to enter the same port number as the start and end of the range. |
| Protocol | Select the protocol type, UDP, TCP/IP, or Both. |
| Enabled | Select to enable this rule. |
| Apply | Click to save. |
| Port Map | Click to show a list of common applications and their ports. |

3.11.1 Additional Information - Forwarding

Internal Ports are the ports that local servers listen to. External Ports are the ports that the cable modem listens to. For example, a local user on your network (e.g. John) is running a Telnet Daemon on port 64623; the internal port is 64623, the external port is 23. If an **internet user** initializes a Telnet connection request to this router's public IP address, the router recognizes that this is a Telnet connection request to a station. According to existing forwarding rules, the router first translates the packet's destination port to be 64623, and then forward this request to John's Telnet host.

In summary, when you have port forwarding rules set up, your router takes the data off of the external IP address:port number and sends that data to an internal IP address:port number. Port Forwarding rules are created per port. So a rule set up for port 53 will only work for port 53. A port can only be used by one program at a time.

3.12 Advanced Gateway Setup - Port Triggering

The **Port Triggering** option allows you to configure dynamic triggers to specific devices on the LAN. This allows for special applications that require specific port numbers with bi-directional traffic to function properly. Applications such as video conferencing, voice, gaming, and some messaging program features may require these special settings. Refer to [page 30](#) for more information on how to setup Port Triggering.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Gateway** link from the top of the screen.
3. Click **Port Triggering** from the left side of the screen. The **Port Triggering** fields are explained following this screen example.

Advanced Gateway Setup

- Options
- MAC Filtering
- IP Filtering
- Port Filtering
- Forwarding
- Port Triggering
- Pass Through
- DMZ Host
- IP Mapping

Advanced Gateway - Port Triggering

| Port Triggering | | | | | |
|-----------------|----------|--------------|----------|----------|--------------------------|
| Trigger Range | | Target Range | | Protocol | Enable |
| Start Port | End Port | Start Port | End Port | | |
| 0 | 0 | 0 | 0 | Both | <input type="checkbox"/> |
| 0 | 0 | 0 | 0 | Both | <input type="checkbox"/> |
| 0 | 0 | 0 | 0 | Both | <input type="checkbox"/> |
| 0 | 0 | 0 | 0 | Both | <input type="checkbox"/> |
| 0 | 0 | 0 | 0 | Both | <input type="checkbox"/> |
| 0 | 0 | 0 | 0 | Both | <input type="checkbox"/> |
| 0 | 0 | 0 | 0 | Both | <input type="checkbox"/> |
| 0 | 0 | 0 | 0 | Both | <input type="checkbox"/> |
| 0 | 0 | 0 | 0 | Both | <input type="checkbox"/> |
| 0 | 0 | 0 | 0 | Both | <input type="checkbox"/> |

| Label | Description |
|----------------------|--|
| Trigger Range | The trigger port is a port (or a range of ports) that triggers the router to record the IP address of the LAN computer that sent the traffic to a server on the WAN. |
| Start Port | Enter a port number or the starting port number in a range of port numbers. |
| End Port | Enter a port number or the ending port number in a range of port numbers. |
| Target Range | Target Range is a port (or a range of ports) that a server on the WAN uses when it responds to service requests. The router forwards the traffic with this port (or range of ports) to the client computer on the LAN that requested the service |
| Start Port | Enter a port number or the starting port number in a range of port numbers. |
| End Port | Enter a port number or the ending port number in a range of port numbers. |
| Protocol | Define the protocol type for this rule, UDP, TCP, or Both. |
| Enable | Click to activate this rule. |
| Apply | Click to save. |

3.12.1 Additional Information - Port Triggering


Some services use a dedicated range of ports on the client side and a dedicated range of ports on the server side. With regular port forwarding you set a forwarding rule to forward a service to the IP address of a LAN side host. The problem is that port forwarding forwards a service to a **single** LAN IP address.

With port triggering, we define 2 kinds of ports: Trigger Port and Target Port. Trigger port is defined as the service request with a specific destination port number sent from a LAN side host. Target Port is defined as the ports this specific application requires a LAN host to listen to. Thus, the server returns responses to these ports.

Example:

1. John requests a file from the Real Audio server (port 7070). Port 7070 is a "trigger" port and causes the wireless router to record John's computer IP address. The DDW3611 Wireless Cable Modem Gateway associates John's computer IP address with the "target" port range of 6970-7170.
2. The Real Audio server responds to a port number ranging between 6970-7170.
3. The DDW3611 Wireless Cable Modem Gateway forwards the traffic to John's computer IP address.

- Only John can connect to the Real Audio server until the connection is closed or times out.

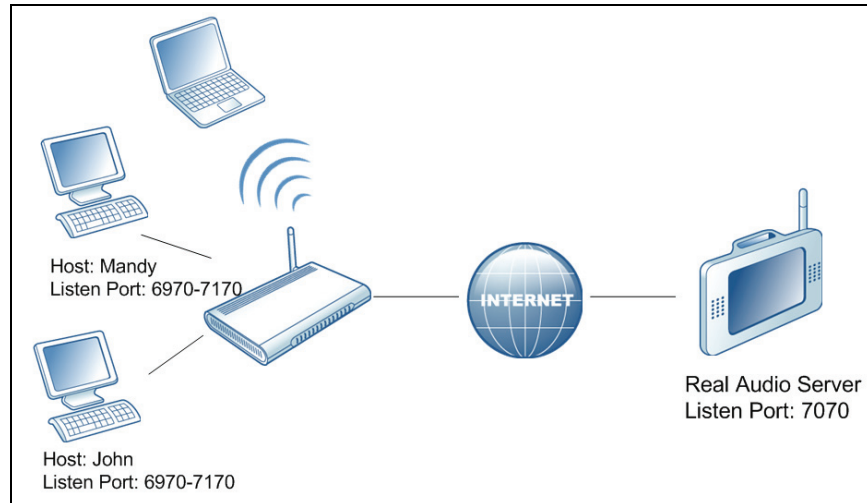

3.13 Advanced Gateway Settings - Pass Through

The **Pass Through** option allows you to configure a pass through table. Devices in the pass through table are treated as bridge devices, storing and forwarding data between LAN interconnections.

- Access the web interface. Refer to [page 7](#), if needed.
- Click the **Gateway** link from the top of the screen.
- Click **Pass Through** from the left side of the screen. The **Pass Through** fields are explained following this screen example.

MODEM | GATEWAY | WIRELESS | VPN | ROUTING | FIREWALL | PARENTAL CONTROL | TOOLS

Basic Gateway Setup

- Information
- Setup
- DHCP
- Static Lease
- DDNS
- Time

Advanced Gateway Setup

- Options
- MAC Filtering
- IP Filtering
- Port Filtering
- Forwarding
- Port Triggering
- Pass Through
- DMZ Host

Advanced Gateway - Pass Through

| Index | MAC Address | Clear |
|-------|-----------------------------|--------------------------|
| 1. | 00 : 00 : 00 : 00 : 00 : 00 | <input type="checkbox"/> |
| 2. | 00 : 00 : 00 : 00 : 00 : 00 | <input type="checkbox"/> |
| 3. | 00 : 00 : 00 : 00 : 00 : 00 | <input type="checkbox"/> |
| 4. | 00 : 00 : 00 : 00 : 00 : 00 | <input type="checkbox"/> |
| 5. | 00 : 00 : 00 : 00 : 00 : 00 | <input type="checkbox"/> |
| 6. | 00 : 00 : 00 : 00 : 00 : 00 | <input type="checkbox"/> |
| 7. | 00 : 00 : 00 : 00 : 00 : 00 | <input type="checkbox"/> |
| 8. | 00 : 00 : 00 : 00 : 00 : 00 | <input type="checkbox"/> |

Apply

| Label | Description |
|--------------------|--|
| Index | Index number of the pass through rule. |
| MAC Address | Input the host's MAC address. |
| Clear | Select the box to delete this rule. |
| Apply | Click to save. |

3.14 Advanced Gateway Settings - DMZ Host

The **DMZ Host** option allows you to configure a host IP address to be exposed or visible to the WAN (public internet). This may be used when applications do not work with port triggers, or for other networking strategies.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Gateway** link from the top of the screen.
3. Click **DMZ Host** from the left side of the screen. The **DMZ Host** fields are explained following this screen example.

| Label | Description |
|--------------------|--------------------------------|
| DMZ Address | Enter the DMZ host IP address. |
| Apply | Click to save. |

4 Wireless

This chapter contains instructions for all wireless configuration settings.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Wireless** link from the top of the screen.

4.1 Radio

The **Radio** option allows you to configure the wireless radio including the current country, channel number, and bandwidth control.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Wireless** link from the top of the screen.
3. Click **Radio** from the left side of the screen. The **Radio** fields are explained following this screen example.

The screenshot shows a web interface with a top navigation bar containing links: MODEM | GATEWAY | WIRELESS | VPN | ROUTING | FIREWALL | PARENTAL CONTROL | TOOLS. The left sidebar has a 'Wireless' section with sub-links: Radio, Primary Network, Access Control, Advanced, Bridging, and Wifi Multimedia. The main content area is titled 'Wireless Radio' and displays the following configuration options:

- Wireless Interfaces: DDW3611BE (90:4C:E5:6B:D3:D6)
- Wireless: Enabled
- Country: UNITED STATES (dropdown menu)
- Output Power: 100% (slider)
- 802.11 Band: 2.4 Ghz (dropdown menu)
- 802.11 n-mode: Auto (dropdown menu)
- Bandwidth: 20 Mhz (dropdown menu)
- Sideband for Control Channel (40 Mhz only): Lower (dropdown menu)
- Control Channel: 1 (dropdown menu) Current : 1

At the bottom of the configuration area are two buttons: 'Apply' and 'Restore Wireless Defaults'.

| Label | Description |
|---------------------|--|
| Wireless Interfaces | Displays the Wireless name / MAC address. |
| Wireless | Displays the wireless radio's status, Enabled or Disabled. |
| Country | Select the country where you use this device. |
| Output Power | Set the percent of the Output Power for the radio. |
| 802.11 Band | You can choose 2.4Ghz or 5 Ghz. Note: The distance coverage for 5Ghz is less than 2.4Ghz. |

| | |
|---|---|
| 802.11 n-Mode | Select Auto to use 802.11 n mode when possible. This mode has a significant increase in the maximum raw OSI physical layer data rate from 54 Mbit/s to a maximum of 600 Mbit/s with the use of four spatial streams when at a channel width of 40 MHz. |
| Bandwidth | You have the options of 20Mhz and 40Mhz. If choosing 20Mhz, the sideband label should not be set. And if choosing 40 Mhz, the sideband should set to lower or upper 20Mhz. 40 MHz channels doubles the channel width. This allows for a doubling of the PHY data rate over a single 20 MHz channel. |
| Sideband for Control Channel (40 Mhz only) | Only when using 40Mhz Bandwidth, should you choose the Lower or Upper 20Mhz. |
| Control Channel | Select a specific channel 1-11 to deploy the wireless network. This allows you to set the operating frequency/channel depending on your particular region. |
| Apply | Click to save. |
| Restore Wireless Defaults | Click to restore the factory default settings for wireless configurations. |

4.2 Primary Network

The **Primary Network** option allows you to configure a variety of wireless security settings.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Wireless** link from the top of the screen.
3. Click **Primary Network** from the left side of the screen. The **Primary Network** fields are explained following this screen example. **Note:** Wireless default values are discussed in “Default Values” on [page 4](#).

The screenshot displays the 'Wireless Primary Network' configuration page. The top navigation bar includes links for MODEM, GATEWAY, WIRELESS, VPN, ROUTING, FIREWALL, PARENTAL CONTROL, and TOOLS. The left sidebar lists 'Wireless' options: Radio, Primary Network (selected), Access Control, Advanced, Bridging, and Wifi Multimedia.

The main configuration area is titled 'Wireless Primary Network' and shows the MAC address DDW3611BE (90:4C:E5:6B:D3:D6). The 'Primary Network' is set to 'Enabled'. The 'Network Name (SSID)' is 'DDW3611BE'. The 'Closed Network' is 'Disabled'. Security options include WPA (Disabled), WPA-PSK (Enabled), WPA2 (Disabled), and WPA2-PSK (Disabled). The 'WPA/WPA2 Encryption' is set to 'TKIP+AES'. The 'WPA Pre-Shared Key' is 'DDW36117CD4BE', with a 'Show Key' checkbox checked. The 'RADIUS Server' is '0.0.0.0', 'RADIUS Port' is '1812', and 'RADIUS Key' is empty. The 'Group Key Rotation Interval' is '0'. The 'WPA/WPA2 Re-auth Interval' is '3600' with a value range of 1~65535. 'WEP Encryption' is 'Disabled', 'Shared Key Authentication' is 'Optional', and '802.1x Authentication' is 'Disabled'. There are four 'Network Key' fields (1-4) and a 'Current Network Key' set to '1'. A 'PassPhrase' field is empty, with a 'Generate WEP Keys' button. The 'Automatic Security Configuration' section shows 'WPS' as 'Unconfigured' and a note about the physical button. The 'WPS Setup AP' section has a 'PIN' of '12345670' and a 'Configure' button. The 'WPS Add Client' section has 'Add a client' options for 'Push-Button' and 'PIN' (selected), with an 'Add' button and a 'PIN' field.

| Label | Description |
|------------------------------------|---|
| Primary Network | Select to Enable or Disable the primary network. |
| Network Name | Enter the unique SSID of the cable modem, or accept the default. Refer to page 4 for more information on the SSID. |
| Closed Network | If Enable is selected, the selected SSID is hidden and is undiscoverable by wireless clients unless manually setup on the client. If Disabled, the SSID is discoverable. |
| WPA | Wi-Fi Protected Access (WPA) is a subset of the IEEE 802.11i standard. Key differences between WPA and WEP are user authentication and improved data encryption. |
| WPA-PSK | If you don't have an external RADIUS server you should use WPA-PSK (WPA Pre-Shared Key) that only requires a single (identical) password entered into wireless gateway and wireless client. As long as the passwords match, a client will be granted access to the wireless LAN. |
| WPA2 | Advanced protocol, certified through Wi-Fi Alliance's WPA2 program, implements the mandatory elements of 802.11i. In particular, it introduces a new AES-based algorithm, CCMP, that is considered fully secure. |
| WPA2-PSK | If you don't have an external RADIUS server you should use WPA2-PSK (WPA Pre-Shared Key) that only requires a single (identical) password entered into wireless gateway and wireless client. As long as the passwords match, a client will be granted access to the wireless LAN. |
| WPA/WPA2 Encryption | Switch to enable or disable WPA/WPA2 encryption. |
| WPA Pre-Shared Key | The encryption mechanisms used for WPA and WPA-PSK are the same. The only difference between the two is that WPA-PSK uses a simple common password, instead of user-specific credentials. Refer to page 4 for the default value of the shared key. |
| RADIUS Server | Input the IP address of RADIUS server, if used. |
| RADIUS Port | Enter a RADIUS port number when WPA or 802.1x network authentication is selected. |
| RADIUS Key | Enter the RADIUS Key when WPA or 802.1x network authentication is selected. |
| Group Key Rotation Interval | Allows the wireless router to generate the best possible random group key and update all the key-management capable stations periodically. |

| Label | Description |
|---|--|
| WPA/WPA2 Re-auth Interval | Wireless router (if using WPA-PSK key management) or RADIUS server (if using WPA key management) sends a new group key out to all clients. The re-keying process is the WPA equivalent of automatically changing the WEP key for a wireless access point and all stations in the WLAN on a periodic basis. Setting of the WPA Group Key Update Timer is also supported in WPA-PSK mode. |
| WEP Encryption | If you don't have WPA(2)-aware wireless clients, then use WEP key encrypting. A higher bit key offers better security. WEP encryption scrambles the data transmitted between the wireless stations and the DDW3611 Wireless Cable Modem Gateway to keep network communications private. It encrypts unicast and multicast communications in a network. Both the wireless stations and the DDW3611 Wireless Cable Modem Gateway must use the same WEP key. Data Encryption can be set to WEP 128-bit , 64-bit , or Disable . |
| Shared Key Authentication | Shared Key is an authentication method used by wireless LANs, which follow the IEEE 802.11 standard. Wireless devices authenticate each other by using a secret key that is kept by both devices. |
| 802.1x Authentication | Enable to have the DDW3611 Wireless Cable Modem Gateway authenticate wireless clients. |
| Network Key 1-4 | You can pre-define up to 4 keys for 64-bit or 128-bit (64-bit keys require 10 hexadecimal digits) (128-bit key require 26 hexadecimal digits). |
| Current Network Key | You can select one of the four pre-defined keys as the current network key. |
| Passphrase | You can set WEP encryption key by entering a word or group of printable characters in the Passphrase box and click Generate WEP keys. These characters are case sensitive. |
| Generate WEP Keys | Force the wireless router to generate 4 WEP keys automatically. |
| Apply | Click to save the wireless configurations. |
| Automatic Security Configuration | Use this feature to setup WPS (Wifi Protected Setup) for devices connecting to the wireless network. |
| Device Name | Enter a name for this wireless cable modem for WPS. |
| PIN | Enter the Personal Identification Number for this wireless cable modem. |

| Label | Description |
|---------------------------------------|--|
| Configure | Click this button to apply the WPS-Device Name/PIN Setup. |
| WPS Add Client/Push Button/PIN | Select which method to have connecting wireless clients connect to the wireless network, Push Button or PIN. If PIN is selected, enter the PIN clients are required to enter in order to access the wireless cable modem. For push button, a client pushes a button, either on the device or in software on the device, and then on the wireless cable modem to establish secure communications. |
| Apply | Click Apply to save WPS configurations. |

4.3 Access Control

The **Access Control** option allows you to configure what clients can access your wireless network.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Wireless** link from the top of the screen.
3. Click **Access Control** from the left side of the screen. The **Access Control** fields are explained following this screen example.

| Label | Description |
|---------------------------|--|
| Wireless Interface | Select the wireless interface in order to set access control parameters. |
| MAC Restrict Mode | <p>Use this feature to control wireless access to your network by MAC address.</p> <p>Select Disable to turn off MAC Restrictions and allow any wireless client to connect to this wireless router. Note, however, if you use other security mechanisms for access to the wireless network, clients must still adhere to those restrictions.</p> <p>Select Allow to create a list of wireless clients that can connect to the wireless network. Enter the MAC Addresses of these clients in the MAC Addresses fields. All MAC addresses not on the list, will not be allowed access to your wireless network.</p> <p>Select Deny to create a list of wireless clients that you do not want to have access to your wireless network. Enter the MAC Addresses of these clients in the MAC Addresses fields.</p> |

| | |
|--------------------------|---|
| MAC Addresses | Input the MAC addresses. You may consider cutting and pasting MAC addresses from the connected clients list at the bottom of the screen. |
| Apply | Click to save. |
| Connected Clients | List of current connected Wireless client listed by MAC address. Fields definitions are: Age(s)—The duration since the wireless client connected to wireless router. RSSI(dBm)—Received signal strength in the wireless environment. IP Addr—The IP address assigned to this wireless client. Host Name—The host name of the wireless client. |

4.4 Advanced

The **Advanced** option allows you to configure data rates and WiFi thresholds.

Note: This feature is available when logged into the device using the MSO user login. Refer to [page 4](#) for more information.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Wireless** link from the top of the screen.
3. Click **Advanced** from the left side of the screen. The **Advanced** fields are explained following this screen example.

The screenshot shows the 'Wireless Advanced' configuration page. The top navigation bar includes links for MODEM, GATEWAY, WIRELESS, VPN, ROUTING, FIREWALL, PARENTAL CONTROL, and TOOLS. On the left, a sidebar lists options: Radio, Primary Network, Access Control, Advanced (selected), Bridging, and Wifi Multimedia. The main content area is titled 'Wireless Advanced' and contains the following settings:

- 54g™ Mode: 54g Auto
- Basic Rate Set: Default
- 54g™ Protection: Auto
- XPress™ Technology: Disabled
- Rate: Auto
- Beacon Interval: 100 (Value Range: 1~65535)
- DTIM Interval: 1
- Fragmentation Threshold: 2346
- RTS Threshold: 2347
- NPHY Rate: Auto
- 802.11n Protection: Auto
- Multicast Rate: Auto

An 'Apply' button is located at the bottom right of the configuration area.

| Label | Description |
|--------------------------------|---|
| 54g™ Network Mode | This field can only be set if 802.11-n Mode to set to Off in the Radio screen as discussed on page 33 . Select which network mode in which to run DDW3611 Wireless Cable Modem Gateway. The options are listed below: 54g auto, for self adaptive connection 54g performance, highest speed 54g LRS, for limited speed 802.11b, for connections to 11b clients only. |
| Basic Rate Set | Select the Basic Rate Set which is the rate that all wireless clients must support in order to connect to the DDW3611 Wireless Cable Modem Gateway. The options are All and Default . |
| 54g™ Protection | In Auto mode, the DDW3611 will use RTS/CTS to improve 802.11g performance in mixed 802.11 b/g networks. Turn protection Off to maximize 802.11g throughput under most conditions. |
| XPress™ Technology | XPress™ is a standards-based frame-bursting approach to improve 802.11g wireless LAN performance developed by Broadcom. Select to Enable or Disable this feature. Additional Information: When Xpress is turned on, aggregate throughput can improve by up to 27% in 802.11g-only networks, and up to 75% in mixed networks comprised of 802.11g and 802.11b standard equipment. |
| Rate | Select Auto or select a specific data rate to limit the connection rates of wireless clients. |
| Beacon Interval | Specify the Beacon Interval from 100 to 6553 5ms. This value indicates the frequency interval of the beacon. A beacon is a packet broadcast by the DDW3611 to keep the network synchronized. A beacon includes information regarding the wireless networks service area, the access point address, the broadcast destination addresses, a time stamp, delivery traffic indicator maps, and the Traffic Indicator Message (TIM). |
| DTIM Interval | Specify the DTIM interval from 3 to 255ms. This value indicates how often the DDW3611 sends out a Delivery Traffic Indication Message (DTIM). Lower settings result in more efficient networking, while preventing your wireless clients from dropping into power-saving sleep mode. Higher settings allow your wireless clients to enter sleep mode, thus saving power, but interferes with wireless transmissions. |
| Fragmentation Threshold | Specify the fragmentation threshold packet size between 256-2346 bytes. Fragmentation takes place when a packet's size exceeds the fragmentation threshold. |
| RTS Threshold | Specify the RTS threshold from 0 to 2347ms. This setting determines how large a packet can be before the DDW3611 coordinates transmission and reception to ensure efficient communication. This value should remain at its default setting of 2347 bytes. If you encounter inconsistent data flow, minor modification to this setting is recommended. |

| | |
|---------------------------|--|
| NPHY Rate | Set the Physical Layer (NPHY) rate. These rates are only applicable when the 802.11n mode is configured as Automatic . |
| 802.11n Protection | If you select Auto , the DDW3611 will use Request to Send/Clear to Send (RTS/CTS) to improve the performance in 802.11 mixed environments. If you select Off , the 802.11 performance will be maximized under most conditions, while the other 802.11 modes (802.11b, etc.) will be secondary. |
| Multicast Rate | Specify the rate at which multicast packets are transmitted and received on your wireless network. |
| Apply | Click to submit changes. |

4.5 Bridging

The **Bridging** option allows you to configure the DDW3611 Wireless Cable Modem Gateway to act as a wireless network bridge and establish wireless links with other wireless access points. To establish a bridge, you need to know the MAC address of the peer device, which must also be in wireless bridging mode. The DDW3611 Wireless Cable Modem Gateway can establish up to four wireless links with other wireless access points. When wireless devices are in wireless bridging mode, they form a WDS (Wireless Distribution System) allowing the computers in one LAN to connect to the computers in the other LAN.

Note: Be careful to avoid bridge loops when you enable bridging devices. Bridge loops cause broadcast traffic to circle the network endlessly, resulting in possible throughput degradation and disruption of communications.

Note: This feature is available when logged into the device using the MSO user login. Refer to [page 4](#) for more information. Also, Firewall menu options are not available when the device is in Bridge mode. Firewall options are available only when the device is in NAT, NATRoute, or Route modes.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Wireless** link from the top of the screen.
3. Click **Bridging** from the left side of the screen. The **Bridging** fields are explained following this screen example.

| Label | Description |
|--------------------------|---|
| Wireless Bridging | Select Enabled to enable bridging. Select Disabled to disable bridging. |
| Remote Bridges | Enter the MAC address(es) of other wireless access points that you want to establish a bridge to and from. Keep in mind that these access points must also have bridging enabled. |
| Apply | Click to save all changes. |

4.6 Wifi Multimedia

The **Wifi Multimedia** option allows you to configure QoS (Quality of Service) to ensure the quality of service in wireless networks. **Wifi Multimedia** controls WLAN transmission priority on packets to be transmitted over the wireless network. WMM QoS prioritizes wireless traffic according to the delivery requirements of the individual user and applications. Refer to [page 45](#) for more information on **Wifi Multimedia**.

Note: This feature is available when logged into the device using the MSO user login. Refer to [page 4](#) for more information.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Wireless** link from the top of the screen.
3. Click **Wifi Multimedia** from the left side of the screen. The **Wifi Multimedia** fields are explained following this screen example.

The screenshot shows the 'Wireless Wi-Fi Multimedia' configuration page. On the left, a sidebar lists 'Wireless' settings: Radio, Primary Network, Access Control, Advanced, Bridging, and Wifi Multimedia. The main content area has a title 'Wireless Wi-Fi Multimedia' and three toggle switches: 'WMM Support' (On), 'No-Acknowledgement' (Off), and 'Power Save Support' (On). Below these is an 'Apply' button. The page contains two tables of EDCA parameters.

| EDCA AP Parameters: | CWmin | CWmax | AIFS | TXOP(b) Limit (usec) | TXOP(a/g) Limit (usec) | Discard Oldest First |
|---------------------|-------|-------|------|----------------------|------------------------|----------------------|
| AC_BE | 15 | 63 | 3 | 0 | 0 | Off |
| AC_BK | 15 | 1023 | 7 | 0 | 0 | Off |
| AC_VI | 7 | 15 | 1 | 6016 | 3008 | Off |
| AC_VO | 3 | 7 | 1 | 3264 | 1504 | Off |

| EDCA STA Parameters: | CWmin | CWmax | AIFS | TXOP(b) Limit (usec) | TXOP(a/g) Limit (usec) |
|----------------------|-------|-------|------|----------------------|------------------------|
| AC_BE | 15 | 1023 | 3 | 0 | 0 |
| AC_BK | 15 | 1023 | 7 | 0 | 0 |
| AC_VI | 7 | 15 | 2 | 6016 | 3008 |
| AC_VO | 3 | 7 | 2 | 3264 | 1504 |

An 'Apply' button is located at the bottom right of the configuration area.

| Label | Description |
|---------------------------|--|
| WMM Support | Select On or Off to turn on or off WMM support. |
| No Acknowledgement | Select On or Off to turn on or off the acknowledgement of data frames. In QoS mode, frames to send can have two values: QosAck and QosNoAck. Frames with QosNoAck are not acknowledged, thus avoiding the retransmission of highly time-critical data. |

| | |
|--|---|
| Power Save Support | Select On or Off to turn on or off power savings. WMM Power Save increases the efficiency and flexibility of data transmission. Specifically, the wireless client device can "doze" between packets to save power, while the wireless access point buffers downlink frames. The application chooses the time to wake up and receive data packets to maximize power conservation without sacrificing Quality of Service. |
| EDCA-AP Parameters | Enhanced Distributed Channel Access - Access Point. In this area of the screen, four Access Categories (ACs) are listed to prioritize wireless network traffic. Refer to the next row below. |
| AC-BE AC-BK AC-VI AC-VO | The Wi-Fi Multimedia feature prioritizes traffic according to four access categories (ACs): AC-BE —Best Effort, medium throughput and delay. Most traditional IP data is sent to this queue. AC-BK —Background, high throughput. Bulk data that requires maximum throughput and is not time-sensitive is sent to this queue (for example, FTP data). AC-VI —Video AC-VO —Voice |
| CWmin/CWmax/AIFSN | For each AC, set the following fields: CWmin/CWmax AIFS—Interframe Space Back off Counter |
| TXOP (b) Limit (usec)/TXOP (a/g) Limit (usec)/Discard Oldest First | Enter a TXOP limit. Each AC is assigned a Transmit Opportunity (TXOP). A TXOP is a bounded time interval during which a station can send as many frames as possible (as long as the duration of the transmissions does not extend beyond the maximum duration of the TXOP). If a frame is too large to be transmitted in a single TXOP, it should be fragmented into smaller frames. The use of TXOP reduces the problem of low rate stations gaining an inordinate amount of channel time in the legacy 802.11 DCF MAC. A TXOP time interval of 0 means it is limited to a single MSDU or MMPDU. |
| EDCA STA Parameters | These settings are used for receiving terminals. |
| CWmin/CWmax/AIFSN TXOP (b) Limit (usec)/TXOP (a/g) Limit (usec) | Refer to the rows above for definitions of these fields. |
| Apply | Click to save all changes. |

4.6.1 Additional Information - WiFi MultiMedia (WMM)

WMM QoS is a part of the IEEE 802.11e QoS enhancement to certified WiFi wireless networks. On wireless access points without WMM QoS, all traffic streams are given the same access priority to the wireless network. If the introduction of another traffic stream creates a data transmission demand that exceeds the current network capacity, then the new traffic stream reduces the throughput of the other traffic streams. A WMM QoS capability in a network may assign access categories (ACs) to various streams of packets. The assigned AC of a stream of packets may depend on the packets' priority, for example, as assigned by an application, and may be referred

to as a user priority (UP). An AC may include a common set of enhanced distributed channel access (EDCA) parameters that may be used by QoS to contend for a channel in order to transmit packets with certain priorities.

Different ACs may be associated with different power saving parameters. One such power saving parameter may be, for example, the delivery mechanism used by an access point (AP) to deliver packets to a station (STA) that is operating in a reduced power mode. For example, one delivery mechanism may be the “legacy” power save mechanism of the IEEE 802.11 standard: “ANSI/IEEE Std. 802.11, Information technology—Telecommunications and information exchange between systems—Local and metropolitan area networks—Specific requirements—Part 11: Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications” (published 1999; reaffirmed June 2003). Another delivery mechanism may be the automatic power save delivery (APSD) mechanism, e.g., unscheduled APSD (UAPSD) or scheduled APSD (S-APSD), as defined in 802.11e. A QoS station (QSTA) may define all or some of the ACs as trigger-enabled and/or delivery-enabled. A trigger- and delivery-enabled AC may use UAPSD as the default delivery mechanism, whereas an AC that is neither trigger- nor delivery-enabled may use the “legacy” power save delivery mechanism.

5 Parental Control

This chapter provides instructions for controlling the internet access of users on the DDW3611 Wireless Cable Modem Gateway network. These parental control features include defining user/password access, defining the what times users are allowed to access the internet, blocking certain web sites, and blocking certain sites by keywords.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Parental Control** link from the top of the screen.

5.1 User Setup

The **User Setup** option allows the configuration of user accounts that can or cannot connect to your wireless or wired network, and the parameters of the connection.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Parental Control** link from the top of the screen.
3. Click **User Setup** from the left side of the screen. The **User Setup** fields are explained following this screen example. Note: To enable Parental Control, refer to [page 49](#).

The screenshot shows the 'Parental Control - User Setup' web interface. At the top, a navigation bar includes links for MODEM, GATEWAY, WIRELESS, VPN, ROUTING, FIREWALL, PARENTAL CONTROL, and TOOLS. On the left, a sidebar under 'Parental Control' lists 'User Setup', 'Basic', 'Tod Filter', and 'Event Log'. The main content area is titled 'Parental Control - User Setup' and contains a 'User Configuration' section with the following fields and controls:

- Add User** button
- User Settings** section with a dropdown menu (currently showing '1. Default'), an **Enable** checkbox, and a **Remove User** button.
- Password** and **Re-Enter Password** input fields.
- Trusted User** checkbox with an **Enable** label.
- Content Rule** section with a **White List Access Only** checkbox and a dropdown menu (currently showing '1. Default').
- Time Access Rule** section with a text area for rule definition.
- Session Duration** and **Inactivity time** input fields, both with 'min' units.
- Apply** button.

Below the configuration fields is the **Trusted Computers** section, which includes a note: 'Optionally, the user profile displayed above can be assigned to a computer to bypass the Parental Control login on that computer.' It features a row of six input fields for IP address (each with '00' as a placeholder) and an **Add** button. Below this is a **No Trusted Computers** section with a **Remove** button.

| Label | Description |
|---|--|
| User Configuration/Add User/Remove User/Enable | Select an existing user account to edit from the User Settings pop-up menu. Or, enter a new user name and click the Add button. To activate the user, click the Enable button. To remove a user, select a user from the pop-up menu and click the Remove button. |
| Password | Enter the password for this user. It is required when this user tries to access the Internet via the wireless router. |
| Re-Enter Password | Re-enter the password as required. |
| Trusted User | Click the Enable checkbox to allow the selected user to be trusted user. That means the user is now limited to timing and content when visiting Internet, as defined in the following fields. |
| Content Rule | Select from the pop-up menu an existing content rule that defines what kind of websites the user can visit or not. |
| White List Access Only | If you have created a content rule which defines a black list and white list, then you can select the White List Access Only checkbox to force the wireless modem to execute the policy for the selected user |
| Time Access Rule | Select a defined time access rule to apply to the selected user. |
| Session Duration | Enter a time in minutes for the user's session expiration. Upon expiration, the user can log back in for the same session duration. |
| Inactivity Time | Enter the time out value when a user has no activity on the Internet. When the time expires, the user interface to the internet cancelled. |
| Apply | Click to save all changes. |
| Trusted Computers | Define the trusted hosts that will bypass the Parental Control Process. |
| Add | Enter the trusted host's MAC address and click the Add button to save. |
| Remove | To remove a trusted computer, highlight it from the list and click the Remove button. |

5.2 Basic Settings

The **Basic** option allows basic selection of rules which block certain Internet content and certain Web sites. When you change your Parental Control settings, you must click on the appropriate "Apply," "Add," or "Remove" button for your new settings to take effect. Refresh your browser's display to see the currently active settings.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Parental Control** link from the top of the screen.
3. Click **Basic** from the left side of the screen. The **Basic** fields are explained following this screen example.

| Label | Description |
|--|--|
| Enable Parental Control | Click the Enable checkbox to activate the Parental Control feature. |
| Apply | Click to save all changes in the screen and activate Parental Control, if enabled. |
| Content Policy Configuration | This part of the screen allows you to configure the internet content access policy. |
| Add New Policy | Enter a policy name and click Add New Policy to create a new policy. |
| Content Policy List/Remove Policy | Select from the list an existing policy to edit or remove. If removing a policy, select it from the list and click the Remove Policy button. |

| | |
|---|---|
| Keyword List/ Add Keyword/ Remove Keyword | Enter keywords to use in order to filter out web site addresses (URLs) containing those words. Enter a keyword and click the Add Keyword button. To remove a keyword, select it from the list and click Remove Keyword. |
| Blocked Domain List/ Add Domain/ Remove Domain | Enter web domains (for example, unwanted.com) to use in order to filter out access to those domains. Enter a domain and click the Add Domain button. To remove a domain, select it from the list and click Remove Domain. |
| Allowed Domain List | This list allows users to visit specific sites. This list restricts users to these sites only. |
| Add Allowed Domain | Enter a domain name and click Add Allowed Domain. |
| Remove Allowed Domain | To remove a domain, highlight it from the list and click Remove Allowed Domain. |

5.3 Tod Filter

The **Tod Filter** option allows the configuration of time-based access policies to block all internet traffic at specified times.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Parental Control** link from the top of the screen.
3. Click **Tod Filter** from the left side of the screen. The **Tod Filter** fields are explained following this screen example.


| Label | Description |
|--------------------------------|--|
| Add New Policy | Enter a policy name and click the Add New Policy button. |
| Time Access Policy List | Select a policy to edit from the drop-down list. |

| | |
|----------------------|--|
| Enable/Remove | Select the Enabled checkbox to activate this policy. If the checkbox is unselected, the policy is not active. To remove a policy, select the policy from the drop-down list and click the Remove button. |
| Days to Block | Select the days to block Internet access. The internet access times for the days selected to block are defined in the following fields. |
| Time to Block | |
| All Day | Select All Day to eliminate all access during the days selected to block. Or, enter a specific time range in the Start and End fields. |
| Apply | Click to save all changes. |

5.4 Event Log

The **Event Log** option displays Parental Control event log reporting.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Parental Control** link from the top of the screen.
3. Click **Event Log** from the left side of the screen. The **Event Log** fields are explained following this screen example.

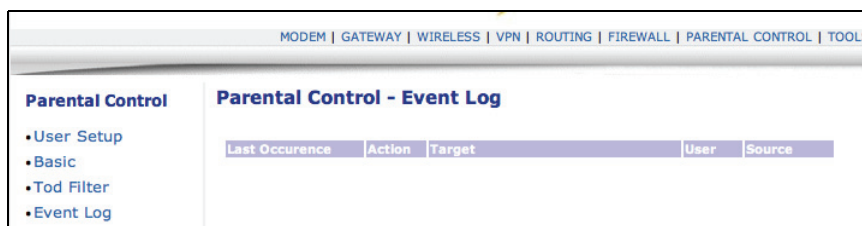

| Label | Description |
|--------------------------|--|
| Last Occurrence | Displays the time when the last event occurred. |
| Action | Displays what is done by parental control, including dropping or permitting access requests. |
| Target | Displays the destination IP address of a certain access request. |
| User | Displays the user who triggered this event log. |
| Source | Displays the source IP address of this event. |
| Refresh/Clear Log | Click Refresh to update the log with the most currently recorded events. Click Clear to empty the displayed log entries. |

6 Tools

This chapter contains instructions for using a variety of tools to evaluate and diagnose the DDW3611 Wireless Cable Modem Gateway.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Tools** link from the top of the screen.

6.1 Ping

The **Ping** option provides a Ping utility to test connectivity.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Tools** link from the top of the screen.
3. Click **Ping** from the left side of the screen. The **Ping** fields are explained following this screen example.

| Label | Description |
|---------------------|--|
| Ping Target | Enter the IP address to which you want to send a ping. A ping tests the network connectivity between devices by sending a test message to a specific device. You can also confirm the size of data sent is the same as received. |
| Ping Size | Enter the packet size to send for the ping operation. |
| No. of Pings | Enter the number of ping commands to send to the ping target. |

| | |
|--|---|
| Ping Interval | Define the interval between ping operations in milliseconds. |
| Start Test/Abort Test/Clear Results | Click Start to start the ping test. Click Abort Test to cancel the test. Click Clear Results to clear the displayed ping results. |
| Results/Refresh | The Results area of the screen displays the ping results. Click Refresh to update the screen with on-going ping tests. |

6.2 Trace Route

The **Trace Route** option is a utility to test the route that data is taking to and from the DDW3611 Wireless Cable Modem Gateway.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Tools** link from the top of the screen.
3. Click **Trace Route** from the left side of the screen. The **Trace Route** fields are explained following this screen example.


| Label | Description |
|-----------------------|--|
| Tracert Target | Enter the specific IP address or domain (e.g. yahoo.com) to which you want to trace a route. |
| MAX Hops | Define the MAX hops. Hops is the number routers that the trace route traverses. |

| | |
|--|---|
| Time Out | Enter the expiration time for this trace route operation. |
| Start Test/Abort Test/Clear Results | Click Start to start the trace route test. Click Abort Test to cancel the test. Click Clear Results to clear the displayed trace route results. |
| Results/Refresh | This Results area of the screen displays the trace route results. Click Refresh to update the screen with on-going trace route tests. |

6.3 Client List

The **Client List** option displays connected computers to the DDW3611 Wireless Cable Modem Gateway.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Tools** link from the top of the screen.
3. Click **Client List** from the left side of the screen. The **Client List** fields are explained following this screen example.

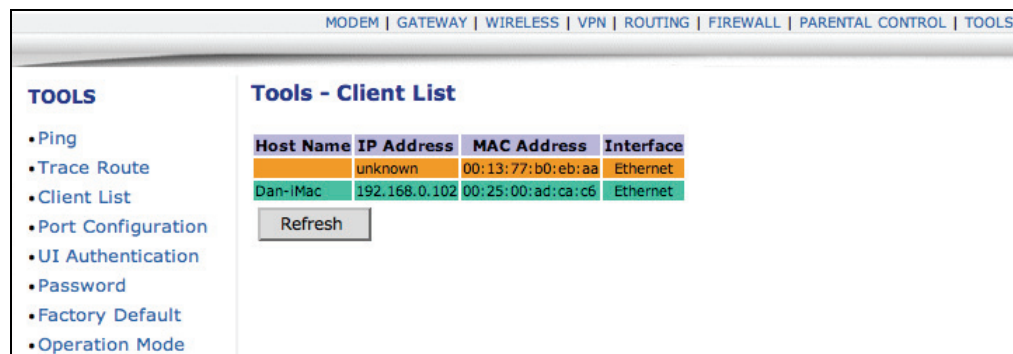

| Label | Description |
|--|---|
| Hostname/IP Address/MAC Address | DHCP Clients currently connected to the DDW3611 Wireless Cable Modem Gateway are displayed in this list and are identified by the hostname, IP address, and MAC address of the connected devices. |
| Interface | The method that clients are connected to the device is displayed (for example, ethernet LAN, Wireless). |
| Refresh | Click to refresh the client list. This may be useful when testing network connectivity between connecting clients and the DDW3611 Wireless Cable Modem Gateway. |

6.4 Password

The **Password** option allows you to change the password for the **user** login on the DDW3611 Wireless Cable Modem Gateway. This login is used to access this web interface.

1. Access the web interface. Refer to [page 7](#), if needed.
2. Click the **Tools** link from the top of the screen.
3. Click **Password** from the left side of the screen. The **Password** fields are explained following this screen example.

| Label | Description |
|---|---|
| Master New Password/Confirm Password | |
| End User New User Name/Password/Confirm Password | Enter a new user name, if desired for the user account to the web interface of the DDW3611 Wireless Cable Modem Gateway. See page 4 for more information. Enter the new Password. Re-enter the password to Confirm. Click Apply to save the changes. |

6.5 Factory Default

The **Factory Default** option allows you to restore factory defaults to the system. All parameters set in the device will be reset. Select the items to reset and select the option to **Reset the System**.

Note: Restoring factory defaults to the system resets the **user** and **mso** logins to the device. Refer to [page 4](#) for the default values.

1. Access the web interface. Refer to [page 7](#), if needed.

- Click the **Tools** link from the top of the screen.
- Click **Factory Default** from the left side of the screen. The **Factory Default** fields are explained following this screen example.

| Label | Description |
|--------------------------------------|---|
| Restore Factory Defaults | Select Yes to have the wireless router reset all configured options in the device to factory default settings. |
| Restore User Factory Defaults | Select Yes to restore the wireless router to default settings for the firewall and content filter settings. This operation does not require a reset of the system, discussed below. |
| Reset The system | Select Yes to power cycle and rest the wireless router. |
| Apply | Click Apply to complete the options selected in this screen. |